



PACIFIC STEEL
CERTAIN STRENGTH

Bendometer

Instruction Guide



MINISTRY OF BUSINESS,
INNOVATION & EMPLOYMENT
HIKINA WHAKATUTUKI

SEISMIC[®]
A PACIFIC STEEL PRODUCT

Bendometer

Instruction Guide

ConcreteNZ and Pacific Steel (NZ) Ltd have reissued the bendometer to assist best practice in bending of steel reinforcing. The bendometer is endorsed by Building and Housing of MBIE.

Step 1

Select the appropriate disc by matching the width of one of the notches to the diameter of the bar to be checked.



Step 2

Check that the inside diameter of each bend in the bar is equal to or greater than the diameter of the selected disc.



Any bend with an inside diameter less than the diameter of the selected disc, does not comply with New Zealand Standards.

Note: The Bendometer is intended for use on main bars only, not for stirrups and ties.

For more information call **0800 722 78335**,
email info@pacificsteel.co.nz or visit www.pacificsteel.co.nz